






























		Model	E-20P	C-5050Z	C-5000Z	C-50Z/C-60Z	C-765UZ/C-760UZ/C-770UZ	C-740UZ	C-750UZ	C-730UZ	C-725UZ	C-720UZ	C-4000/C-4040Z C-3000Z/C-3040Z	C-450Z/C-350Z/C-150	C-160/C-310Z/C-360Z C-460Z/C-460Z del Sol	C-220Z
Converter		CLA-5			●										●	
		MCON-40		●	●	◎ <sup>*2</sup>		○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>	●	
		WCON-07		●	●	◎ <sup>*2</sup>		○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>					●	
		TCON-17		●	●	◎ <sup>*2</sup>		○ <sup>*1</sup>	○ <sup>*1</sup>	○ <sup>*1</sup>					●	
	Underwater Case		●	●	●	●	●	●	●	●					⊕ <sup>*3</sup>	⊕ <sup>*3</sup>
Software		CAMEDIA Master Pro	●	●	●	●	●	●	●	●	●	●	●	●	●	●
xD-Picture Cards		16 - 512 MB <sup>*4</sup>		◎ <sup>*5</sup>	●	●	●	●	●	●	●	●			●	●
SmartMedia Cards		16 - 128 MB	●	●								●		●		●
		CompactFlash Card	●	●												
xD-Picture Card Adapters		MAPC-10	●	●	●	●	●	●	●	●	●	●	●	●	●	●
		MACF-10	●	●												
		MAUSB-10	●	●	●	●	●	●	●	●	●	●	●	●	●	●
		MAUSB-100		●	●	●	●	●	●	●	●	●			●	●
Power Supply		BU-70SE/80SE	●	●					●	●	●	●	●	●	●	●
		LB-01E	●	●					●	●	●	●	●	●	●	●
		LI-10B/LI-10C			●	●	●	●								
		B-01/4PE	●	●					●	●	●	●	●	●	●	●
		C-8AC	●	●					●	●	●	●	●	●		
		C-3AC													●	●
		D-7AC			●	●	●	●								
Photo Printer		P-440	●	●	●	●	●	●	●	●	●	● <sup>*6</sup>	● <sup>*6</sup>	● <sup>*6</sup>	● <sup>*6</sup>	●
		P-10				○ <sup>*10</sup>	○ <sup>*10</sup>	○ <sup>*11</sup>								●
		FL-20/FL-50	●	●	●	●		●	●	●	● <sup>*7</sup>				● <sup>*7</sup>	
Flash Bracket		FL-BK01	● <sup>*7</sup>	● <sup>*7</sup>	● <sup>*7</sup>			● <sup>*7</sup>	● <sup>*7</sup>	● <sup>*7</sup>	● <sup>*7</sup>			● <sup>*7</sup>		
Bracket Cable		FL-CB01									●			●		
		FL-CB02	●	●	●			● <sup>*11</sup>	●							
		FL-CB04									● <sup>*8</sup>			● <sup>*8</sup>		
		FL-CB05	●	●	●			● <sup>*11</sup>	●							
	Remote Control		RM-1	●	●	●	●	●	● <sup>*11</sup>	●	●				● <sup>*9</sup>	

\*1 Optional conversion lens adapter CLA-4 necessary  
 \*2 Optional conversion lens adapter CLA-6 necessary  
 \*3 not available for C-150/C-160/C-310Z  
 \*4 512 MB xD-Picture Card is not compatible with C-50Z/C-150

\*5 Optional CF card adapter MACF-10 necessary  
 \*6 Optional CF card adapter MAPC-10 necessary  
 \*7 For connection with FL-20/FL-50 a bracket cable is required  
 \*8 For connection with conventional Studio Flash

\*9 Except for C-4000  
 \*10 Only compatible with C-60Z, mju digital 410  
 \*11 Only for C-770UZ